


RC-X

Saramonic RC-X Remote Control
for Zoom and Sony Handy Recorders

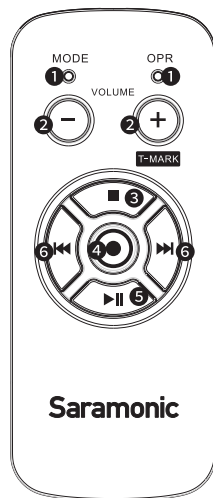

- 1 MODE and OPR indicators
- 2 Volume control V-, V+
- 3 STOP
- 4 REC
- 5 PLAY
- 6 LEFT and RIGHT



2.5-2.5mm: for connecting Zoom recorders



2.5-3.5mm: for connecting Sony recorders

ZOOM

H5/H6		H4n/H4n Pro		H2n	
Button	Recording mode	Playback mode	Recording mode	Playback mode	Playback mode
V-	Decrease volume	Decrease volume	Decrease volume	Decrease volume	Decrease volume
V+	Increase volume	Increase volume	Increase volume	Increase volume	Increase volume
STOP	Stop recording	Stop playing and jump to the recording mode	Stop recording	Stop playing	---
REC	Record/Stop recording	Jump to the recording mode	Ready to record/Record/Mark	Mark	Jump to the recording mode and start recording
PLAY	Mark and pause/Continue to record	Play/Pause	Pause/Continue to record	Record/Pause	Play/Pause
LEFT	---	Play previous recording	---	Play previous recording	Play previous recording
RIGHT	---	Play next recording	---	Play next recording	Play next recording
Indicators	Mode indicator: solid green; OPR indicator: flashing green when pressing buttons				

SONY

M10/D50/D100

Button	Recording mode	Playback mode
V-	---	---
V+	Mark	Mark and stop playing
STOP	Stop recording	Stop playing
REC	Ready to record	---
PLAY	Pause/Continue to record/Start recording	Pause/Continue to play
LEFT	---	---
RIGHT	---	---
Indicators	OPR indicator	Recording: solid green Playback: no lights Press any button one time: flash one time
	Mode Indicator	---
	Please note: when playing audio in Sony D50, there is no "Mark" function.	

Compatibility

Zoom: H5, H6, H4n, H4n Pro, H2n

Sony: M10, D50, D100